



This brochure was prepared with the assistance and co-operation of the Timber Development Association NSW Ltd.
 For further advice telephone the TDA Timber Advisory Service on (02) 9360 3088.
 Copyright Owner: Timber and Building Materials Association (NSW) Limited

Disclaimer: While the Timber and Building Materials Association (NSW) Limited (TABMA) and its members believe this publication is an invaluable guide to this project, the Association cannot guarantee that every statement is without flaw. Therefore, the Association and its members hereby disclaim all liability for errors or omissions of any kind, whether they be negligent or otherwise, or for any loss, damage or other consequence which may arise from any person relying on information stated in this publication.

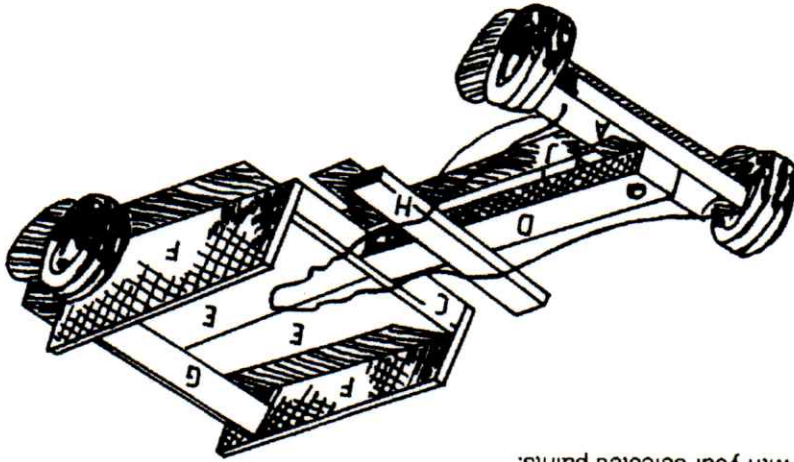

- 10** The final step is to round off all sharp corners with plane or sander and finish all over with your selected paints.
- 9** Fitting footrest: With wheels fixed, position the driver on the seat then locate the footrest, Part H onto the top of Part D. Use two nails to fit the footrest in position.

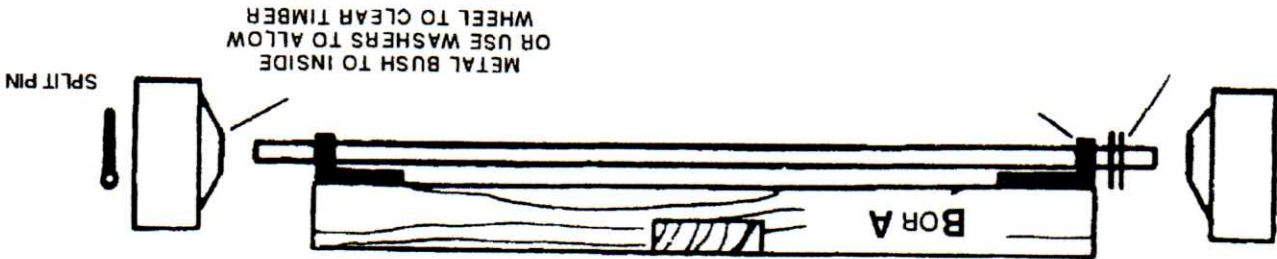

8 Assembling wheels: Slide larger diameter wheels on to rear axles, with metal bush to the inside, or use washers as shown. Finally, insert split pins and bend open. Repeat procedure for front wheels.